



M6 Manual

Conference Omnidirectional Microphone

 
Product features

- 1, USB free driver, Plug-and-play, and the microphone can pick up sound from 360 degree omnidirectional.
2. Full duplex, smooth two-way communication, compatible with a variety of common conference software.
3. DSP digital noise reduction chip to eliminate echo and suppress noise.
4. The microphone can pick up sound within 4 meters.
- 5.Full frequency speaker, high fidelity output.
6. Metal body, stable and anti vibration .
- 7.A variety of application scenarios: online conference, business negotiation, video / audio chat, Skype, games, playing music, etc.


Configuration list

Host	1
Data line	1
Manual	1

Function display

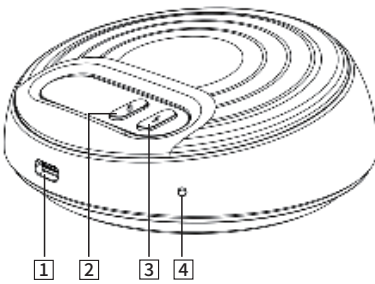


Connection diagram

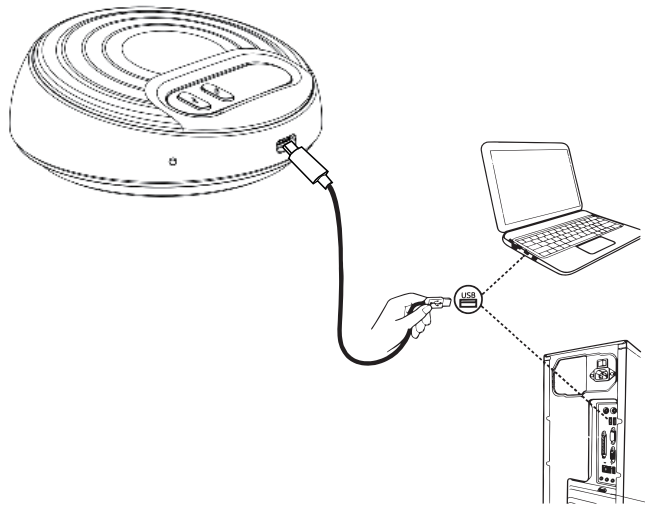 


Instructions

 - (1) Insert one end of the USB A / type-C data cable into the type C port of the microphone and the other end into the USB A port of the computer.
- (2) Control panel sound, select the "recording" tab, and set the microphone "YM USB audio device" as the default device. (see the figure below)

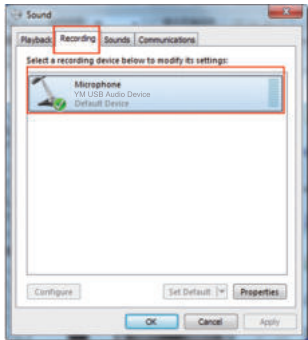

 - (3) Double click the microphone and select the "volume" tab to adjust the volume of the microphone as needed. (see the figure below)

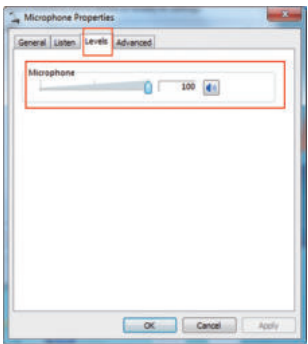

Parameter

Sound Pick-up Range	4M
Pointing mode	Omnidirectional
Frequency response	70Hz-20KHz
Sensitivity	-33±3db
Maximum Input Sound Pressure Level	94db
S/N Ratio	68db (@f=1kHz, Pin=1Pa, A weighted network)
Sampling rate	48KHz/16bit
Communication mode	Duplex
Echo cancellation	support
Active noise reduction	support
Battery	no
Speaker Power	5W
Material	Zinc alloy
USB A - C Cable Length	2.0m
weight	About 400g
Size	120*115*67 mm
System Requirement	Window XP or above (Windows Vista 7/8/10)

Simple fault handling

Problem description	Possible causes	processing method
Connected to the computer but not turned on	The USB interface is not plugged in properly	Check whether the connection is successful. It is recommended to insert the rear USB port
No sound output	The horn sound setting is too low, or the horn mute button is turned on	Adjust the sound output or cancel the horn mute key
Sound distortion,call discontinuity	Output sound too loud	Adjust sound output
No sound input	This device is not selected in recording	select the device, adjust the microphone level, and confirm that the microphone mute button is not turned on

Matters needing attention

1. Keep clean and do not block the microphone pickup hole.
2. Please do not disassemble, refit or repair the device without authorization. If you have any questions, please contact the customer service or dealer.
3. Do not use charging device to access the input port.
4. The device shall be placed in a dry and ventilated place indoors to avoid moisture, water droplets, water ingress and heavy fall. Keep away from strong magnetism.