

User Manual

MEGAPHONE COPA

Model: 15531



Product Specification

Battery installation: Battery cover is at the end of handle. Press the push-button to open the cover, then put battery into the corresponding slot and close the cover. The inside of battery compartment is cathode(-), the outside is anode(+). The megaphone can't work if the battery is installed with wrong plus-n-minus.

Battery charge: Charge battery by putting into matching charging station with correct plus-n-minus. Or Charge megaphone by special USB cable.

Operating instructions:

[ON/OFF]: Short press the button with light on to turn on the power. Now you can speak.

Short press the button again to turn off the power.

[RECORD]: Short press the button with light flash to begin recording. Short press the button again to end the recording session.

[PLAY/BT]: Short press the button to hear your recording. Short press the button again, to stop the loop. Long press the button to open Bluetooth, long press again to end Bluetooth

[MUSIC/SIREN]: Short press the button to play the music. Long press the button to play the siren. Press the button again to stop the loop.

[VOL- ◀▶]: Long press the button to decrease the volume and short press the button to play previous item when TF card, U disk or Bluetooth is used.

[VOL+ ▶▶]: Long press the button to increase the volume and short press the button to play next item when TF card, U disk or Bluetooth is used.

[SINGLE CYCLE ▶||]: **A.** Short press the button to play music, short press again to stop the loop when TF card, U disk or Bluetooth is used

B . Long press the button with light flash to let music go into single cycle music mode, long press again with light on to quit the mode.

Notes:

Change or charge the battery when the light becomes dim or the voice becomes lower during use. Don't shout to human ears. The megaphone is not waterproof.