

User Manual

MEGAPHONE COPA

Model: 15533/BT



Function switch have three shift: MP3 / MIC / SIREN

A. MP3 function:

Push the switch to MP3, the indicator light is on, and enter into MP3 mode.

1. [⏮/RECORD]: Short press the button to play previous item when TF card U disk or BT is used; Long press the button to record; Long press again to end record. recording time exceeds 1000 seconds, it enters the playback mode automatically.
2. [⏮/⏪]: Short press the button to play or stop item of TF card, U disk, BT or AUX; Long press to let item go into single cycle mode or loop mode.
3. [⏭]: Short press the button to play next item when TF card, U disk or BT is used
4. [Play/BT]: Short press the button to play recording; Short press again to close recording. Long press to open the BT function. BT name is MEGAPHONE. Long press again to close BT function.
5. [USB/TF]: Correspondingly insert U disk or TF card, select the function key to play item.
6. [AUX]: Connect Audio source equipment by special wire, then play item. When use AUX, megaphone could not choose ⏮ OR ⏭

B. MIC function:

1. Push the switch to the MIC, pull the trigger switch or press the MIC switch, then you can speak.
2. For long time use, you can lock the switch by pressing the MIC button in the indicated direction, and dial it back when not use.
3. According to your needs, adjust the volume on the MIC; when the environment is very small, there may be howling, and volume should be reduced.

C. SIREN function:

1. Push the switch to the SIREN, pull the trigger switch or press the MIC switch to sound an alarm.
2. For long time use, you can lock the switch by pressing the MIC button in the indicated direction, and dial it back when not in use.
3. The volume of alarm sound is not adjusted. is not in use, the MIC is in the unlock position, the indicator light is off and the power is turned off.