

User Manual

MEGAPHONE COPA

Model: 15518/15518C



All ABS Body, sturdy yet light weight Clear sound, long range & efficient design Conveniently located Volume Control & Switch

Specifications:

Item	Copa Megaphone With Handheld Microphone	
Model	15518	15518C
Horn Diameter	230 mm	
Length	345 mm	
Max Power	50 W	
Sound Coverage	Approximately 800 m	
Main Material	ABS (Acrylonitrile Butadiene Styrene)	
Power Requirement	1.5V (Size C)×8 batteries	2000mAh rechargeable lithium battery
Function	Speak, Siren	

Operation:

Open the Back Cover by pressing the Open Button.

Insert 8 x "C" Cells then close the back cover until it locks. Or you can insert the Rechargeable Battery we offer, be sure to insert the black and double-orifice plug into the jack in the battery compartment. Now your megaphone is ready for action.

To activate the megaphone, press the ON/OFF Button on the Back Cover.

When using the megaphone, place your lips as close as possible to the megaphone. Adjust the Volume Control to the desired level without causing any howling or feedback.

Precautions:

Ensure correct polarity of Cells. Insert the batteries in the correct direction by aligning the (–) marks on the batteries with the spring in the back cover.