

Model Number CM-801/CM-800
Intercom

הוראות הפעלה אינטרקום מדגם CM-801/CM-800



קריאה מיחידה הראשית CM-801 למשנית CM-800

להפעלה לחץ על ON/OFF

לחץ על CALL ביחידה הראשית

ביחידה המשנית ישמע ביפ. ניתן לדבר ללא כל פעולה ביחידה המשנית
ביחידה הראשית על מנת לדבר לחץ על TALK בסיום שחרר.



שיחה מיחידה משנית CM-800 ליחידה ראשית CM-801

לחיצה על כפתור "Call" שומעת צליל ביפ ב- CM-801. אתה יכול לדבר
עם CM-801 ללא כל פעולה.


ביחידה הראשית על מנת לדבר לחץ על TALK בסיום שחרר.
לחיצה על כפתור "פרטיות" להפסיק קבלת קריאה מיחידה ראשית

Since 1968


COMMAX
SmartHome & Security

User Manual

 Wire Intercom CM-800/801

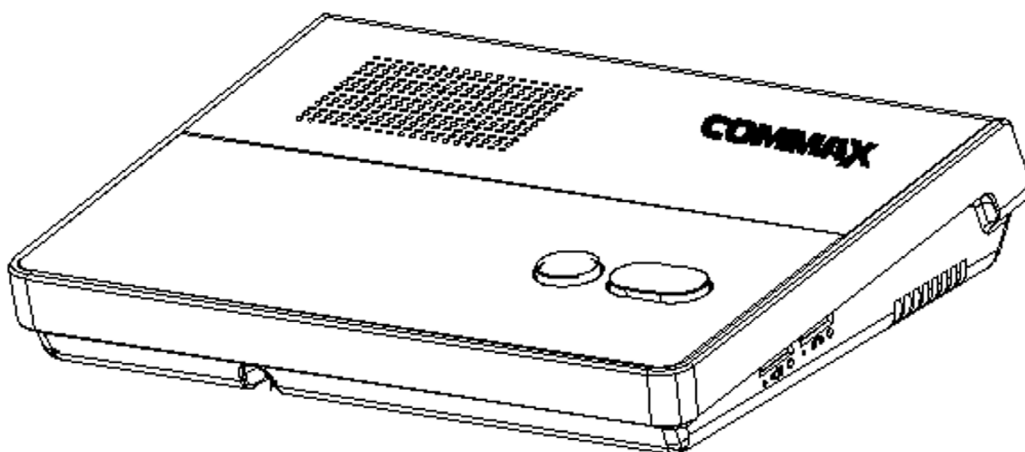


CM-800

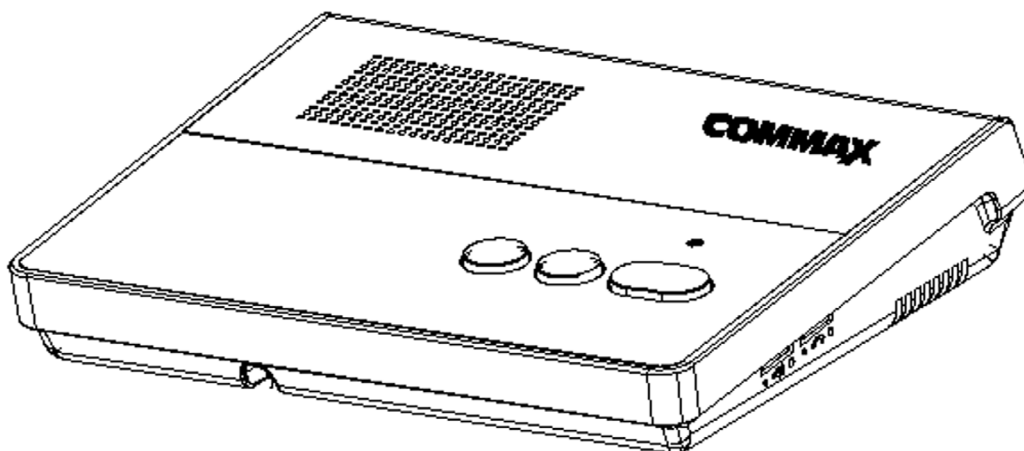 


CM-801



 1. Part Name

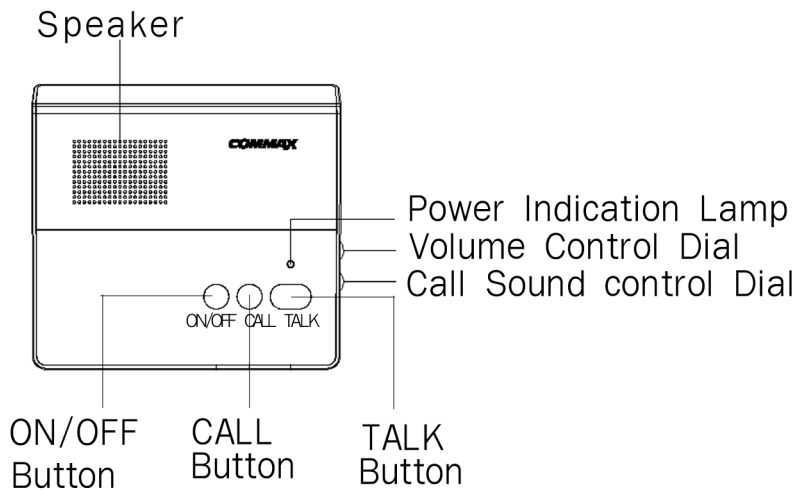

(CM-801)

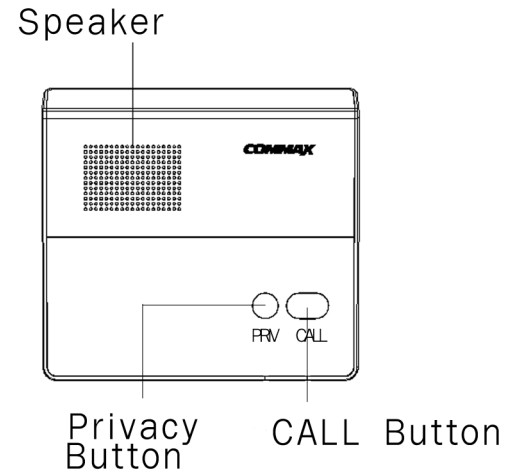 

(CM-800)



2. Operation

2-1. Master Station CM-801

- 1) After pressing on/off button of CM-801, pushing [call] button will making a call to CM-800.
- 2) When receiving a call from the CM-800, pressing "Talk" button of CM-801 will make a conversation with CM-800 and releasing "Talk" button will hear voice from CM-800.
- 3) When CM-800 makes a call to CM-801, you can hear call sound.


**** When the conversation is finished, make sure of pressing "ON/OFF" button.**

 2-2. Sub Station CM-800

- 1) Pressing "Call" button hear call sound from CM-801.
- 2) You can talk with CM-801 without any operating.
- 3) Pressing "Privacy" button to stop delivering the voice from CM-800 to CM-801.



3. Installation & Wiring

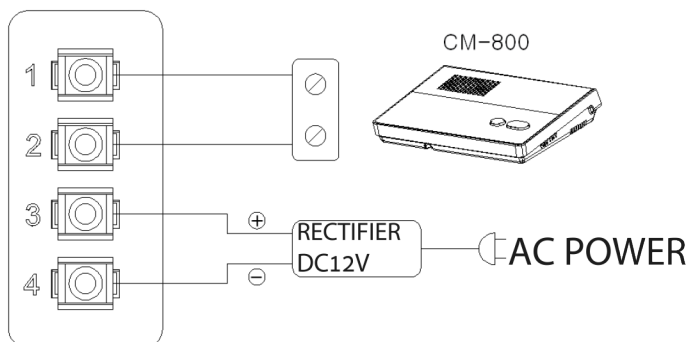

CM-801 terminal of backside

**** 12Voltage/1A power supply is recommendable to use for this products Wiring method**

- 1) Terminal 1 : Connecting with CM-800, Non-Polarity, Max. distance 300m
- 2) Terminal 2 : Connecting with CM-800, Non-Polarity. Max.distance 300m
- 3) Terminal 3 : Connecting with Power supply. +
- 4) Terminal 4 : Connecting with Power supply. -



4. Specification

Item	Description	
Wire	With CM-800 : 2 wires (Talk 2)	
Rated Voltage	DC12V/ 200mA	
Transmission way	Half-Duplex	
Consumption	Standby: 7mA (In the status of connecting with CM-800) Max. : 160mA (In the status of connecting with CM-800)	
Distance	Between CM-801 and CM-800 Max. 300m / 0.65mm-copper wire	
Warranty Period	1 year	
Environment Condition	Storage Temperature	-40 °C to 50 °C
	Storage Humidity	Less than 90 %
Product Life-Cycle	10 years	