


Model Number DR-3PK
Audio Codec

תכנות קודן אודיו DR-3PK

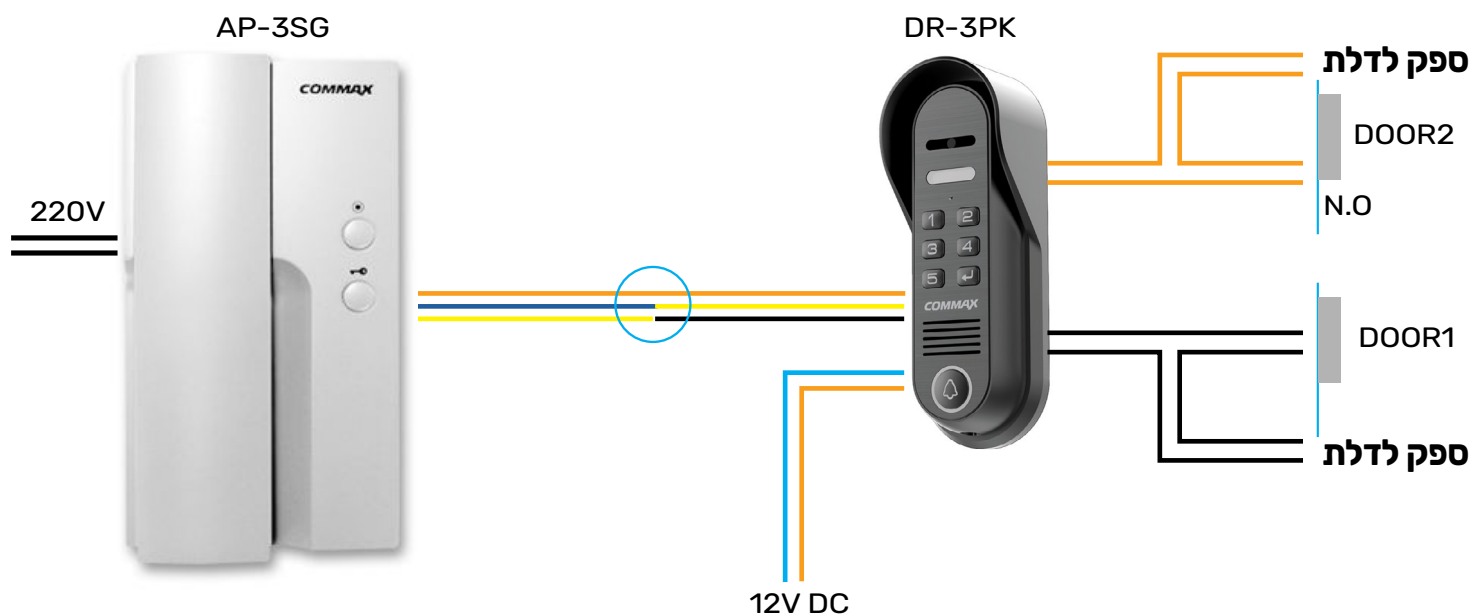

תכנות ממסר מנעול 1:

- לחץ על מקש למשך 2 שניות, יישמע ביפ ויידלק לד כחול.
- הקש קוד פתיחה ישן (ברירת מחדל 1234)
- לחץ על מקש למשך 2 שניות, הלד יהבהב.
- הקש סיסמא חדשה (4-12 ספרות).
- לחץ על מקש למשך 2 שניות, יישמע ביפ. **סיום תכנות.**

פתיחת דלת מהפנל:

- לחץ על מספר המנעול אליו אתה רוצה לגשת 1 או 2
- לחץ על מקש
- הקש קוד 4-12 ספרות.
- לחץ על מקש, יישמע ביפ **הדלת פתוחה.**

איפוס קודן:

- הרם שפורפרת במוניטור.
- לחץ על לחצן צפייה בפנל (קישור בין הפנל למוניטור, פתיחת שיחה ותחילת צפייה).
- הקש לחצן פתיחת דלת 7 פעמים ברצף במשך 20 שניות, הלד יהבהב.
- הקש סיסמא חדשה (4-12 ספרות) לחץ 3 שניות על מקש יישמע ביפ. **סיום איפוס.**

User Manual

Door station unit DR-3PK






1. The names of Each Part

Front side



Back side

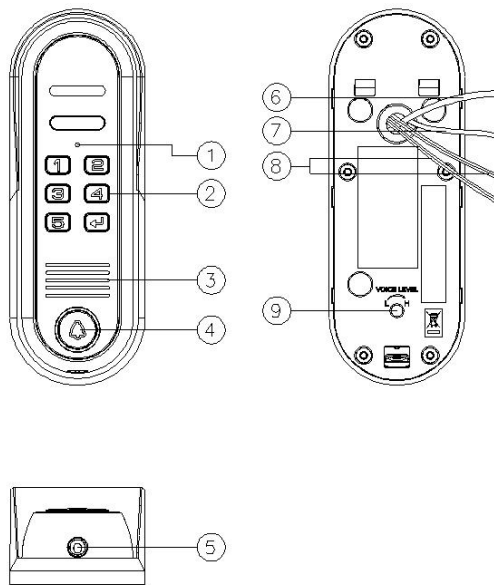

- ① Microphone
- ② Key buttons
- ③ Speaker
- ④ Call Button
- ⑤ Mounting Holes
- ⑥ Door phone cable
- ⑦ DC power cable
- ⑧ Door release cable
- ⑨ Volume control



 2. Package

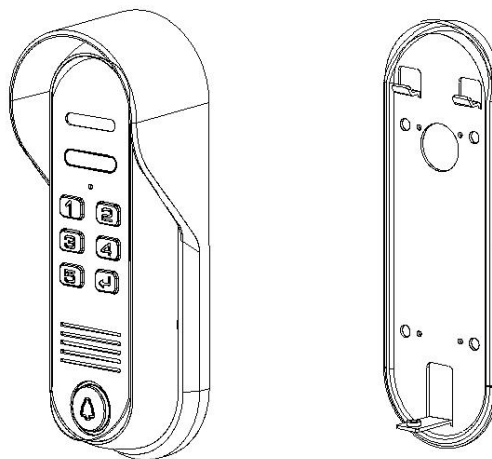


M/T HOLE CAP SCREW PHM 3*8 SCREW LH1T 4*30



CABLE GND 300mm




3. Wiring & Installation

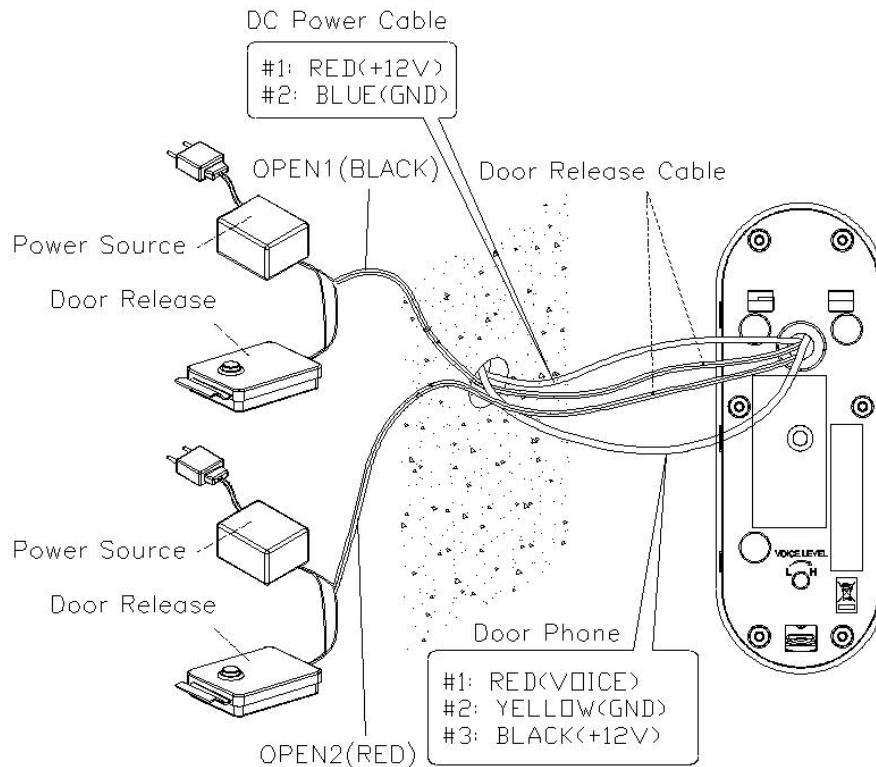


[FIG-1]

1. Align holes on the wall where the unit is to be installed with mounting brackets hole and secure. FIG-2 : Install the unit at a perpendicular angle to the front
2. Wire the household door phone cables as shown below with matched polarity as picture below[FIG-1] (#1:RED/VOICE, #2:YELLOW/GND #3:BLACK/DC12V
3. Wire the door release cable as shown in the diagram.[FIG-1]
4. Tighten using bolts and a wrench, then cover using the AL. screw covers.

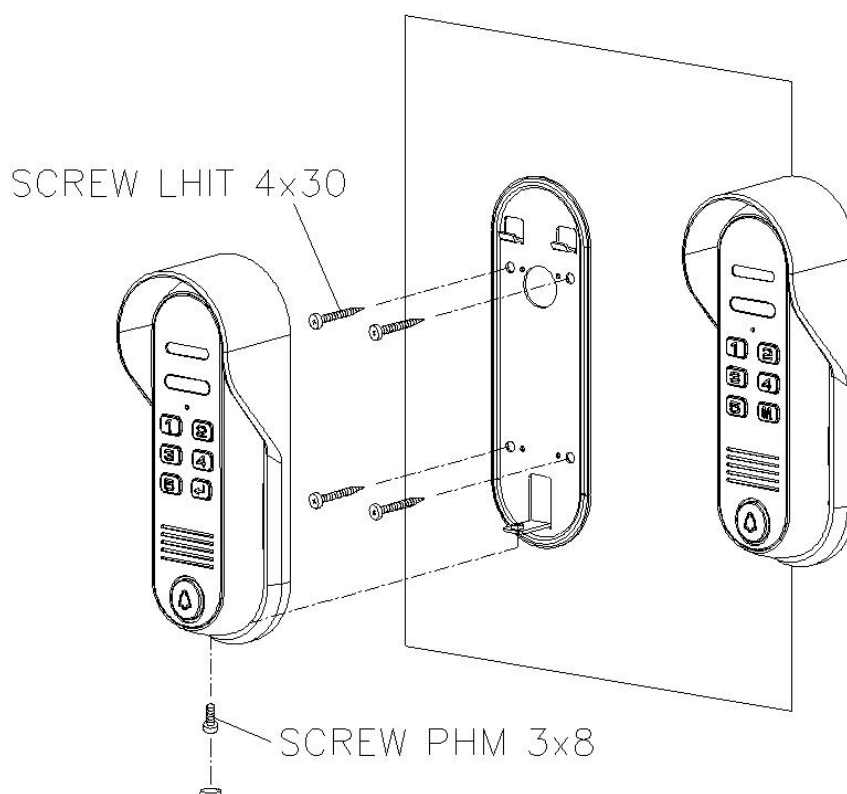

[FIG-2]

You can adjust speaker volume using driver as shown below. [FIG-3]

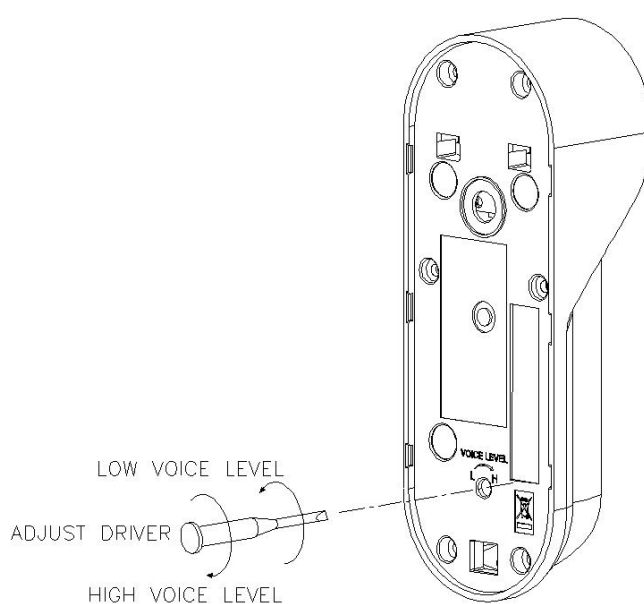

[FIG-3]




4. Specification

specification	Model	DR-3PK
Power source	12V  (supplied from the door phone)	
	12V  (Adaptor : 'RF-1A')	
Power consumption	Standby : 0.7W , Max : 3W	
Wiring(household)	Door phone 3Wires(polarity), Adaptor 2Wires(Polarity)	
Call mode	Duplex	
Workable temperature	-10℃ (tested up to -40℃) +50℃	
Dimension(mm)	59(W) x 164(H) x 42.1(D)	
Weight(g)	400g (B/K included)	
Distance	Househole door phone : 30m (Ø 0.5 - Line Impedance: 3ohm)	
Warranty Period	1 year	
Environment Condition	Storage Temperature	-40 °C to 50 °C
	Storage Humidity	Less than 90 %

Caution

This product requires a 12V power supply, please use RF-1A adapter.
(If you use another adapter, It can hear the noise, In this case, you can use the product components as below picture, Please connect product GND with external FG(Frame ground) so, It can reduce the noise of adapter.)

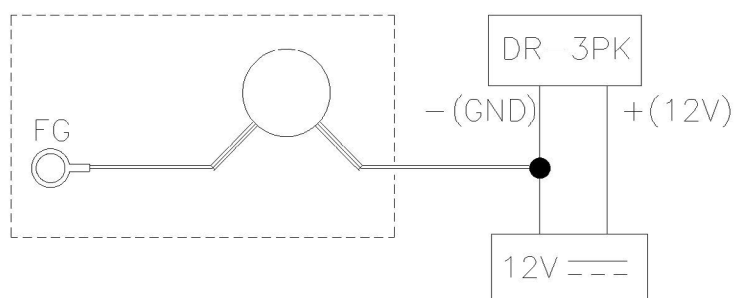



5. How to open the door using keypad button

Note: If you press 'Call button' during operation, you can cancel the current operation.

1. How to set the door open password

1-1 If you know the current password

- (1) Press '↵' button for more than 2 seconds: The beep sound is heard and LED light is on.
- (2) Enter current password (Initial value: '1234')
- (3) Press '↵' button for more than 2 seconds
- ☞ Enter password setting mode : LED light to start blinking and new password can be set.
- (4) Enter new password: Enter the new password to use. (4 to 12 digits)
- (5) Press '↵' button for more than 2 seconds: After beep sound, password has been changed.

1-2 If you forget your current password (It can be used when connected household monitor)

- (1) Repeat pushing door open button on household monitor more than 7 times quickly.
(in less than 20 seconds)
- ☞ Enter password setting mode : LED light to start blinking and new password can be set.
(Caution: To prevent malfunction, please do not repeat pushing door open button normally.)
- (2) Enter new password: Enter the new password to use. (4 to 12 digits)
- (3) Press '↵' button for more than 2 seconds: After beep sound, password has been changed.

* Cautions *

- Please set the password after installation. (Initial password can not be used.)
(For security reasons, 1234 and 4321 can not be set as the password.)
- If you enter wrong password, the setting mode is ended with a failure sound. (toot-toot)
- The setting mode is ended when there is no password input on household monitor for 1 minute after entering the password input mode.
- The setting mode is ended when there is no additional input for 20 seconds during input.
(Even if you press '↵' button during password setting, it can not be saved and only the number is recognized and saved.)

2. How to open door using password

2-1. Lock 1 open: '1' + '↵' + Password + '↵'

☞ Exit the mode after opening the 1st door lock with the door opening sound. (Tu-ru-ru)

2-2. Lock 2 open: '2' + '↵' + Password + '↵'

☞ Exit the mode after opening the 2nd door lock with the door opening sound. (Tu-ru-ru)

* Cautions *

- If the door open button of household monitor is pushed when using password, the operation is canceled.
- If the power of the camera is cutoff due to black-out or other reasons, the door will not open. Please prepare a separate emergency key in case of emergency.