


Yealink



Yealink Documentation
support.yealink.com

DECT IP Phone W71P

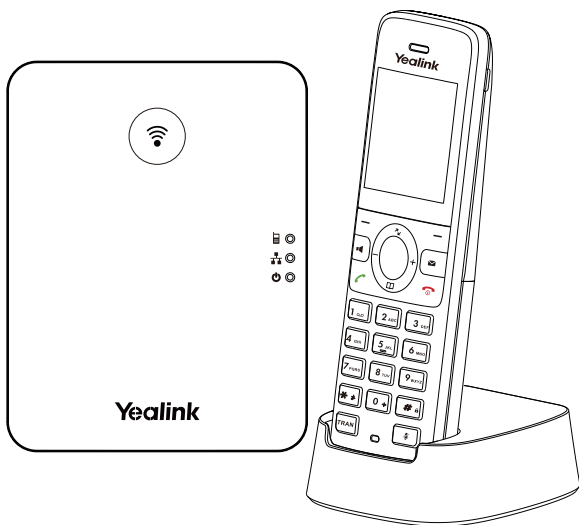

English | Deutsch | Español | Français

Quick Start Guide (V1.2)

Table of Contents

English	1
Deutsch	5
Español	9
Français	13

W71P Package Contents



W71H Handset



W70B Base Station



2 Power Adapters



Base Stand



Ethernet Cable



Battery Cover



Battery



Charging Cradle




Quick Start Guide

Note: Yealink W71P DECT IP phone consists of one W70B base station and one W71H handset.

Assembling the DECT Phone


1. Connect the base station power and the network using method a or method b.

a. AC Power Option

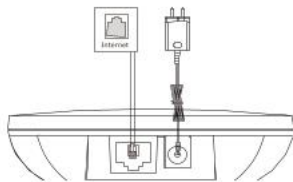

b. PoE (Power over Ethernet) Option

IEEE 802.3af compliant
PoE Hub/Switch

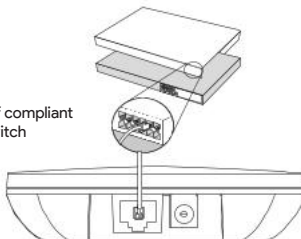


Note:

- If you choose method a, use Yealink supplied power adapter (5V/0.6A). A third-party power adapter may damage the base station.
- If you choose method b, you do not need to connect the power adapter. Make sure the hub/switch is PoE-compliant.


2a. (Desktop Installation) Attach and remove the base stand.

Attach the Base Stand

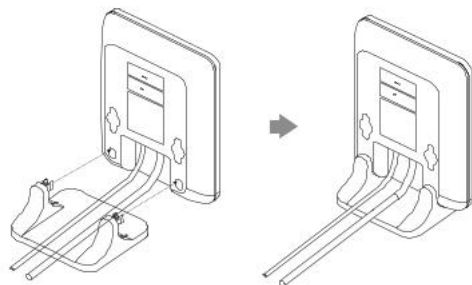


Align the snap-fits with the corresponding holes and push forward, snapping them into the holes.

Remove the Base Stand

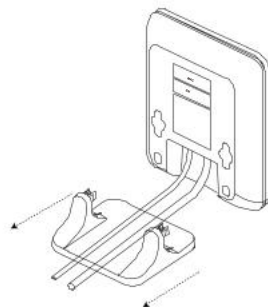


Remove the snap-fits from the holes horizontally.


2b. (Wall-Mount Installation) Attach the base station.

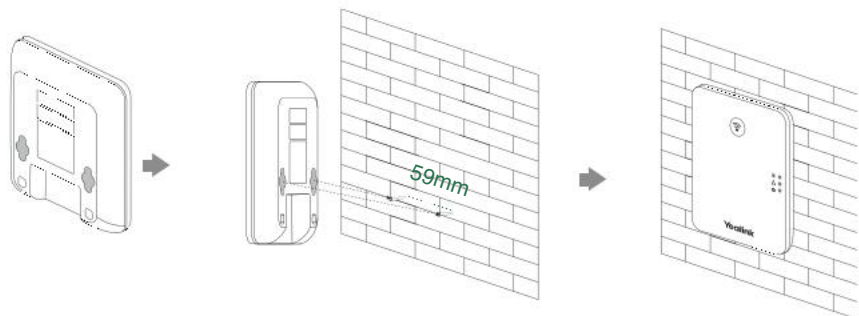


3. Insert the battery into the handset.

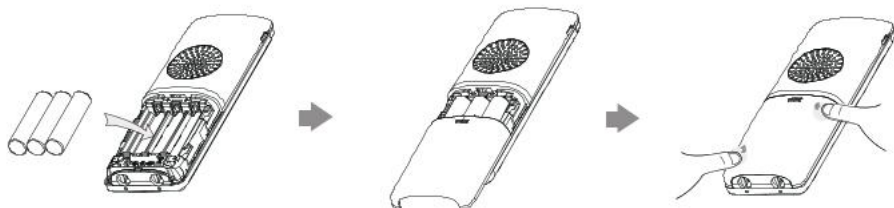

4. (Optional) Mount the charging cradle to the wall.

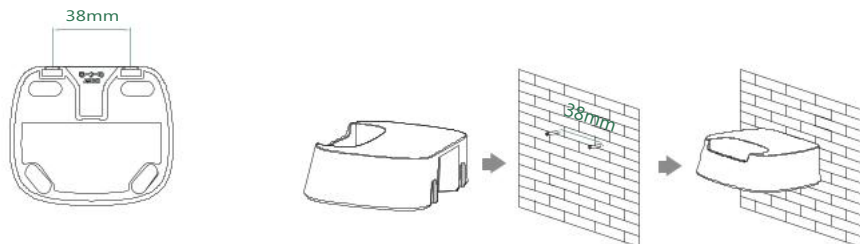

5. Connect the charging cradle and charge the handset.

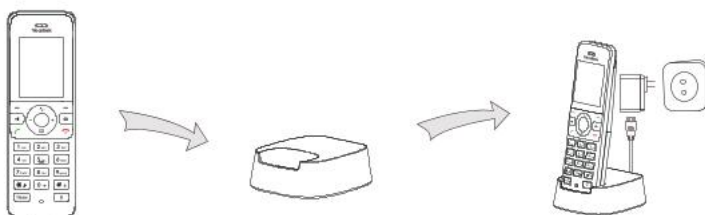

Note:

- Use Yealink-supplied power adapter (5V/0.6A). A third-party power adapter may damage the handset.
- Check the charging status on the top-right corner of the LCD screen.

Hardware Component Instructions

