COMPANICS
Communication & Electronics LTD

כומפניקס תקשורת ואלקטרוניקה בע"מ
הבורסקאי 1 א.ת. סגולה, פ"ת | ספק מ. הביטחון: 83524121 | ח.פ: 512109968
03-9049004 טל' / | www.companics.co.il | sales@companics.co.il

Model Number: 06033
Multi-functions CCTV tester Wire Tracker

מכשיר בדיקה COPA עם בודק PoE



תכונות ומאפיינים:

. הערכה כוללת: תיק נשיאה, יחידת בדיקה, צלצלן, כבל RJ11-RJ11 , כבל RJ45-RJ45 וכבל BNC חשוף עם 2 תנינים (אדום ושחור בקצה).
. מתח עבודה: יחידת בדיקה - 2 סוללות AA צלצלן - 2 סוללות AA (סה"כ 4XAA)
. בדיקת רציפות וזיהוי - נתק בצד קרוב / רחוק
. בדיקת גידים מקוצרים.
. בדיקת רציפות שידור מסוויצ'ים (רגיל /PoE)
. פונקציית צלצלן לאיתור כבלים.
. בדיקת קו טלפון – זיהוי מצב הקו: המתנה, צלצול ונתק.
. בדיקת יציאת מתח מסוויץ' PoE
. סריקת כבלי BNC/UTP/STP/RJ45/RJ11.
. כניסת UTP- תמיכת מקסימום 60v, עמידה במתח.
. מזהה את סוג הכבל: 100Mbps / 1000Mbps + ישר/מוצלב/אחר.
. PD - מזהה אם תפוקת הכוח של מתג ה- PoE תקינה, זיהוי הפינים המשמשים לאספקת החשמל.

COMPANICS
Communication & Electronics LTD

כומפניקס תקשורת ואלקטרוניקה בע"מ
הבורסקאי 1 א.ת. סגולה, פ"ת | ספק מ. הביטחון: 83524121 | ח.פ: 512109968
03-9049004 טל' / | www.companics.co.il | sales@companics.co.il

Model Number: 06033
Multi-functions CCTV tester Wire Tracker

בדיקת רציפות וזיהוי נתק במקומי / מרוחק

- חיבור כבל הרשת בצידו האחד ליחידת הבדיקה (כניסת RJ45) וחיבור צידו השני לצלצלן (כניסת UTP RJ45 שבצידו).
- ביחידת הבדיקה - העברת כפתור ההפעלה למצב SCAN/UTP.
- בצלצלן – לסובב את מתג ההפעלה עם כיוון השעון למצב ON.
- ביחידת הבדיקה ובצלצלן - סריקת רציפות הכבל תחל באופן אוטומטי.
- בשתי היחידות יחד תחל הדלקת נוריות הסריקה מ 1 ועד 8 בסדר עולה, אחת אחרי השנייה.
- נורה דולקת בסריקה– יש רציפות בין הצדדים. נורה כבויה בסריקה – הגיד הנסרק מנותק.
- במהלך הבדיקה יש לשים לב שנורית G (הממוקמת לאחר נורית מספר 8) דולקת באופן רציף. כשנורית זו שדולקת זה מעיד על רציפות תקינה של סיכוך הכבל הנבדק. במידה והנורית כבויה יש בעיה בסיכוך הכבל.
- לחיצה על לחצן SET ביחידת הבדיקה תעביר את סטטוס בדיקת הרציפות למוד / מצב LOCAL (נורית LOCAL תידלק) במצב זה יחידת הבדיקה בודקת את הגידים הקרובים אליה : אם הגידים הקרובים אליה תקינים – כל הנוריות ביחידת הבדיקה ידלקו. אם אחד או יותר מהגידים הקרובים אליה במצב נתק – הנורה המתאימה במספרה, ביחידת הבדיקה, תהיה כבויה.
- לחיצה חוזרת על לחצן SET ביחידת הבדיקה תעביר את סטטוס בדיקת הרציפות ממוד / מצב LOCAL למוד / מצב REMOTE. במצב זה נוריות החיווי ביחידת הבדיקה יציגו האם יש רציפות / נתק בגידים המרוחקים הקרובים לצלצלן (REMOTE). אם הגידים הקרובים אל הצלצלן תקינים – כל הנוריות ביחידת הבדיקה ידלקו . אם אחד או יותר מהגידים הקרובים אל הצלצלן במצב נתק – הנורה המתאימה במספרה, ביחידת הבדיקה, תהיה כבויה.

בדיקת גידים מקוצרים

- חיבור אחד מצידי כבל הרשת אל יחידת הבדיקה (כניסת RJ45).
- העברת מפסק הפונקציות ביחידת הבדיקה ממצב OFF למצב UTP.
- לחיצה על כפתור SET - למעבר למצב LOCAL.
- במצב זה לאחר שהכבל מחובר:
- כל הנוריות דולקות = אין קצר ואין נתק הגידים תקינים.
- נוריות מהבהבות = קצר במספרי הגידים של הנוריות המהבהבות.
- נוריות כבויות = נתק בגידים הקרובים ליחידת הבדיקה.

COMPANICS
Communication & Electronics LTD

כומפניקס תקשורת ואלקטרוניקה בע"מ
הבורסקאי 1 א.ת. סגולה, פ"ת | ספק מ. הביטחון: 83524121 | ח.פ: 512109968
sales@companics.co.il | www.companics.co.il | טל' / 03-9049004

Model Number: 06033
Multi-functions CCTV tester Wire Tracker

בדיקת רציפות מסוויצ' (PoE או ללא)

- חיבור של אחד מצידי כבל הרשת אל יחידת הבדיקה (כניסת RJ45).
- חיבור הקצה השני אל הסוויצ' (PoE או לא PoE).
- הדלקת יחידת הבדיקה ע"י העברת כפתור ההפעלה למצב UTP.
- לחיצה על כפתור SET מספר פעמים (3 פעמים) כדי להגיע למצב בו נורית SWITCH דולקת.
- במצב בו יש רציפות תקינה בכל הגידים של הכבל המגיע מהסוויצ'ידלקו כל נוריות החיווי הרציפות.
- נורית שאינה דולקת מעידה על אי רציפות של הסוויץ" בגיד הספציפי.

איתור כבל – צלצלן

- חיבור כבל הרשת / כבל DATA בחיבור BNC אל יחידת הבדיקה (כניסת RJ45).
- הדלקת יחידת הבדיקה – העברת כפתור ההדלקה למצב SCAN/UTP.
- רגישות הצלצלן מאפשרת לבצע סריקה/איתור של הכבל ממרחק 0-30 ס"מ.
- הדלקת הצלצלן – סיבוב החוגה המרכזית ימינה עם כיוון השעון.

הערה: סיבוב ראשוני של החוגה מדליק / מכבה את הצלצלן.

-המשך סיבוב החוגה ימינה = הגדלת רגישות הצלצלן
-המשך סיבוב החוגה שמאלה = הנמכת רגישות הצלצלן

בדיקת קו הטלפון

- מאפשר בדיקת סטטוס קו הטלפון: המתנה / צלצול / תפוס.
- נורת PHONE דולקת רציף = הקו במצב המתנה.
  - נורית PHONE כבויה = הקו מנותק.
  - נורית PHONE מהבהבת = הקו במצב צלצול.

מזהה פורט PoE

- את חיבור הכבל רשת שמגיע מסוויץ" PoE יש לחבר אל כניסת ה RJ45 שבתחתית הצלצלן.
- לד כתום דולק 45/78 – מציג שקיים מתח, כשהסוויץ" הנבדק הינו PoE.
- לד ירוק דולק 12/36 - מציג שהסוויץ" מעביר גם את הנתונים DATA.

COMPANICS
Communication & Electronics LTD


כומפניקס תקשורת ואלקטרוניקה בע"מ
הבורסקאי 1 א.ת. סגולה, פ"ת | ספק מ. הביטחון: 83524121 | ח.פ: 512109968
03-9049004 טל' / | www.companics.co.il | sales@companics.co.il

Model Number: 06033
Multi-functions CCTV tester Wire Tracker



Multi-function Wire Tracker

User Manual

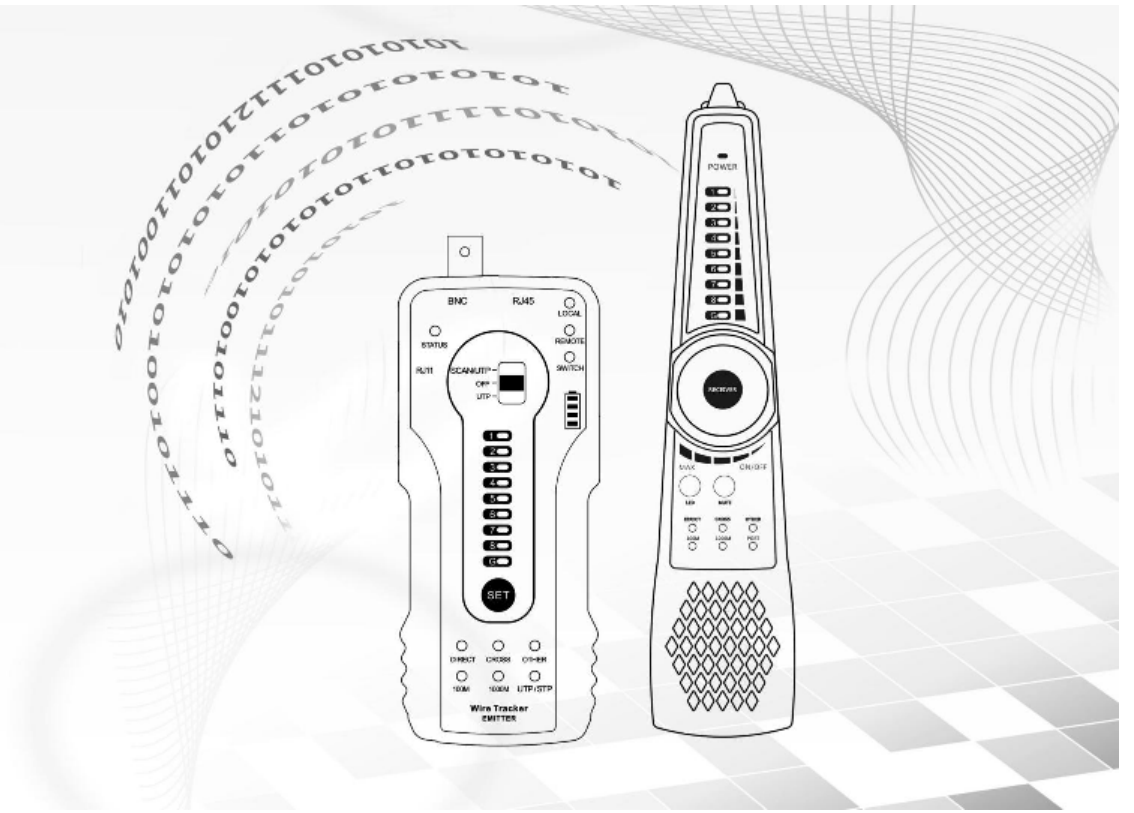

- Thank you for purchasing the Wire Tracker. Please read the manual before using the Wire Tracker and use properly.
- For using the Wire Tracker safely, please first read the「Safety Information」carefully in the manual.
- The manual should be kept well in case of reference.
- Keep the S/N label for after-sale service within warranty period. Product without S/N label will be charged for repair service.
- If there is any question or problem while using the Wire Tracker, or damages occurred on the product, please contact our technical Department.

Content

1. Safety information 1
2. Feature 3
3. Packing list 3
4. Interface and Function Introduction 4
5. The instruction of product application 7
5.1 Cable tracer 7
5.2 UTP detection 9
5.2.1 Sequence and pair line continuity detection 9
5.2.2 Network cable port continuity detection 9
5.2.3 Short circuit test 11
5.2.4 Continuity detection in the state of connected switches 11
5.3 PD powered detected 12
5.4 Other features 12
6. Specifications 13

1. Safety information

at the places which are inapplicable for the use of electrics such as hospital, gas station etc.

◆ To prevent the functional decline or failure, the product should not be sprinkled or damped.

◆ The exposed part of the wire tracer should not be touched by the dust and liquid.

◆ Don’t use the wire tracer where the temperature is high.

◆ Please don't use this instrument to detect power lines (such as 220V power lines), otherwise it may damage the instrument or involve personal safety.

◆ During transportation and use, it is highly recommended to avoid the violent collision and vibration of the tester, lest damaging components and causing failure.

◆ The wire tracker should not be used in the environment with the flammable gas.

◆ Do not disassemble the instrument since no component inside can be repaired by the user. If the disassembly is necessary indeed, please contact with the technician of our company.

◆ The instrument should not be used under the environment with strong electromagnetic interference

2. Feature

◆ Secondary code digital mode, decisively rejects noise and false signals, locate cables quickly and easily.

◆ Cable tracer and UTP cable test in the same interface.

◆ Identify cable type:100M/1000M, straight/cross/other.

◆ UTP/STP/RJ45/RJ11 cable scan and continuity testing.

◆ Identify the status in the working telephone line: standby, ringing and off-hook

◆ Quickly detect the near-end, mid-end and far-end fault point of RJ45 cable plug

◆ UTP port support max 60V withstand voltage, the wire can be traced directly in connection with PoE switch.

◆Shielded cable and shielding layer continuity test

◆ PD powered detection: detect whether the power output of the POE switch is normal, and detect the pins used for power supply.

◆ Support silent mode

◆ Two bright LED lights for working in the dark

3. Packing list

1) Wire tracker emitter

2) Wire receiver

3) RJ45 cable


4) RJ11 cable

5) BNC alligator clip



6) User manual

4. Interface and Function Introduction

1) Emitter Interfaces and functions:

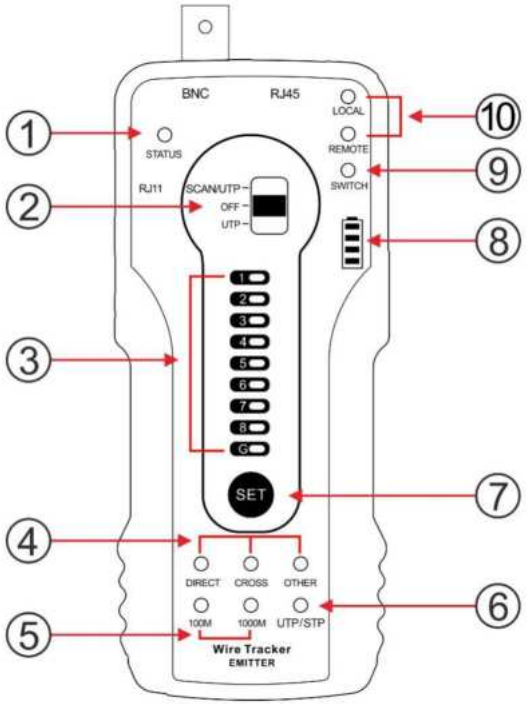


1	Telephone status indicator
2	Functions switch: SCAN/UTP, OFF, UTP cable test
3	UTP cable sequence/ continuity indicators, G is shielded cable
4	UTP cable type indicator: straight /cross /other
5	100M /1000M indicator
6	Cable tracer mode indicator: Green-normal mode, red-shielded mode
7	SET: Switch function shielded or unshielded in cable tracer mode and "local / remote / switch" in UTP cable est mode
8	Battery indicator
9	SWITCH continuity indicator
10	LOCAL/ Remote end continuity indicator

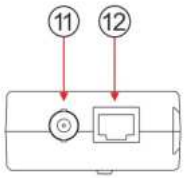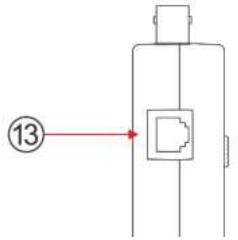
Top interface	Left interface
	
11 BNC interface	
12 UTP/ Scan port	
13 RJ11 port	

Note: Please use telephone status detection in the OFF status. The indicator light off / on / flashing correspond to telephone status standby / ringing / off-hook.

2) Cable tracer (Receiver) Interfaces and functions:

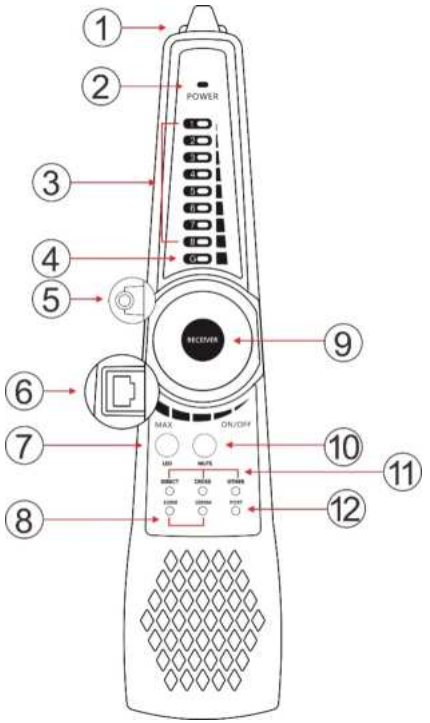

1 LED light

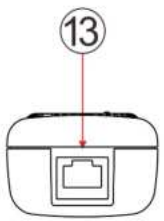
2	Power Indicator
3	UTP cable sequence / signal strength indicator
4	Shielded layer continuity indicator
5	Earphone jack
6	UTP cable test port
7	LED light switch
8	100M /1000M indicator
9	Switch / Sensitivity knob
10	MUTE button (long press to silent mode, short press to port connectivity detection)
11	UTP cable type indicator: straight /cross /other
12	Port continuity detection indicator (ON indicates local end cable connectivity function, OFF indicates cable sequence function)
Bottom interface 	
13	PD Powered test port (detect whether the power output of the PoE switch pins is normal.)

Note: Receiver port continuity detection only supports the local end, does not support the remote end. Emitter can support the near end, middle end and far end port detection.


5. The instruction of product application

5.1 Cable tracer

Connect the network cable into the emitter's RJ45 port, connect BNC cable or RJ11 telephone line to the emitter's BNC or RJ11 port. If no connector cable, can use alligator clips to clip the bare copper wire.

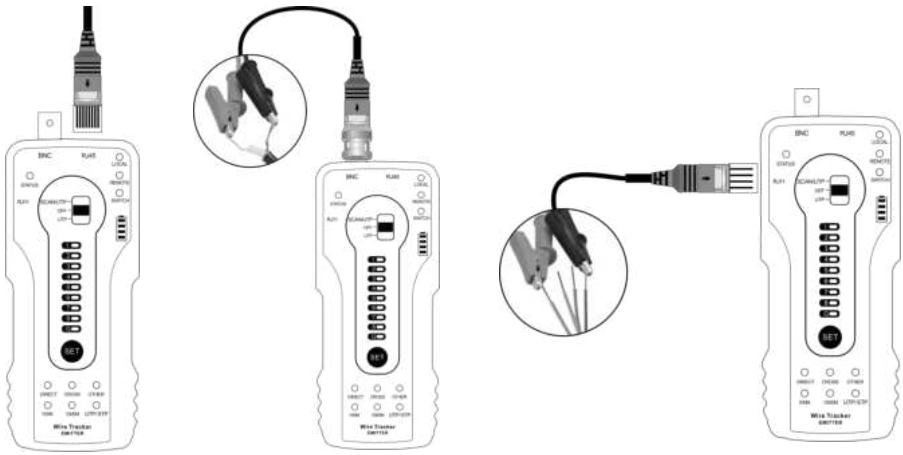


(1) Adjust the switch of emitter to the "Scan/UTP" mode, press "SET" key to switch to UTP/STP mode. The green light of the "UTP/STP" indicator means normal mode, while the red light is shielded mode. Turn on the wire receiver at the same time to trace the wire.

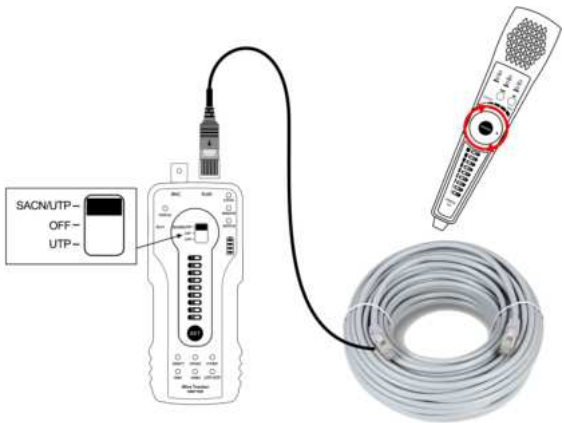

(2) Rotating the knob of receiver to adjust the sensitivity. When the cables are very close, can adjust to the small sensitivity to find the cable.

re. When received the strongest signal, the eight indicator lights are on. Press “MUTE” again to exit MUTE mode.

(3) Quickly verify the tracking result (only for RJ45 port). After found the cable, connect the network cable to wire receiver “UTP” port for pair line detection. For example, When the "Straight/Cross/Other" lights up, indicates the verification of the matching cable. The indicator also shows the type of the cable. The 1-8 and G indicators show the detection of line sequence by default, and the order in which the indicator lights up is the sequence of the line. When connected the cable, the receiver indicator the cable status by sound, the “di” sound is connected pair lines, the “du” sound is short circuit pair lines, all indicator lights of short circuit pairs are on at the same time.

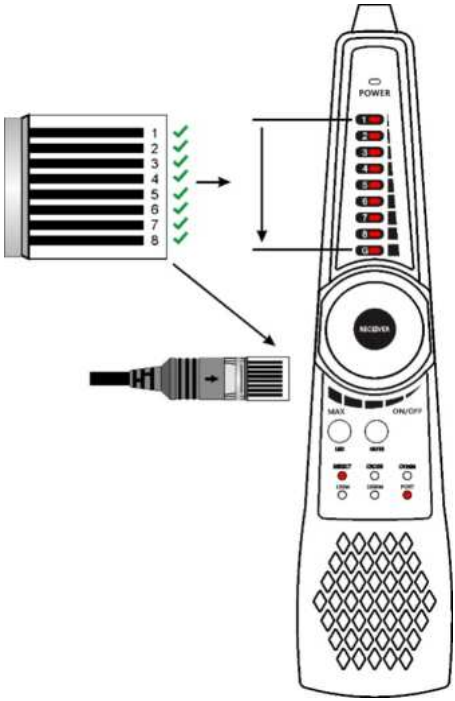

(4) Port continuity and short circuit detection:

Press “MUTE” button, when the indicator light of port is on, the 1-8 and G indicator lights will show the continuity of the line of the RJ45 cable connector or within 1 meter from RJ45 cable connector. As shown on the right, If the light is on, it means it is connected and vice versa. One end of network cable connected to the receiver, the other end is not connected to the emitter, press “Mute”, the “Port” light on, can test the continuity and short circuit of network cable.

Application: Connect one end of network cable to Switch, and the other end connect to RJ45 port of emitter, press “SET” key to switch to the “SWITCH” mode, If the 1236 indicators light on, that is 100M switch, If 12345678 indicators light on, that is 1000M switch.

(5) The UTP port of emitter and receiver can max 60V withstand voltage, the wire can be traced directly in connection with PoE switch.


5.2 UTP detection

5.2.1 Sequence and pair line continuity detection

Step 1: Connect the network cable or telephone cable to the RJ45 port of emitter, and the other end connect to the UTP interface of receiver. (The wire receiver needs to be turned on)

Step 2: Switch the wire tracker emitter to UTP mode, the 1-8 and G indicators will indicate the sequence of cable, 100M and 1000M indicator will indicate whether the cable is 100M or 1000M network, the cable receiver also can see the sequence.

Quickly determine the cable whether is normal through wire tracer emitter or wire receiver, if indicate Direct/ Cross, the cable is normal. After the 8 indicators flashed, the wire receiver will beep to indicate the type of network cable. One sound is a straight cable, double sound is cross cable, and triple sound is another or wrong cable.

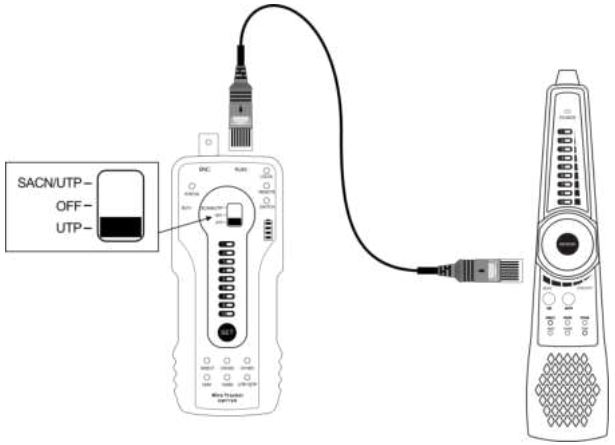


5.2.2 Network cable port continuity detection

In the UTP mode, press “SET” key to switch “LOCAL” mode.

Local port continuity detection: when the “LOCAL” indicator is on, connect the other end of network cable to wire receiver “UTP” port or disconnect the UTP port, the 1-8 and G indicators indicate the continuity status of network cable port or within 1 meter of network port which connected wire tracker emitter.

As shown in the picture below, the 1st core of network cable port on the side of emitter is disconnected, the 1st


indicator is off, it means 1st core of port is disconnected.

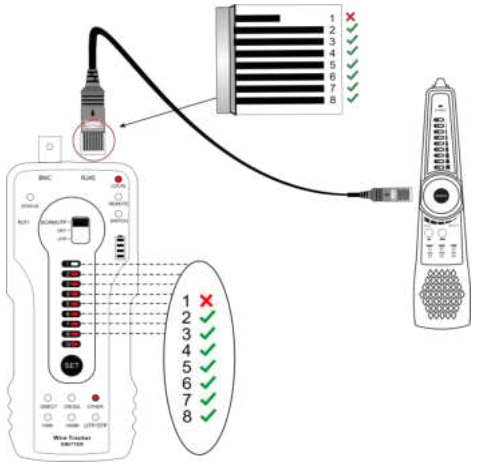

Under UTP mode, press “SET” key to switch to the "REMOTE" function


Remote end continuity detection: The “REMOTE” indicator is on, connect the other end of the cable to the UTP port of Receiver.

1-8, G indicator indicates the continuity of the cable port which connected to the Remote end (Receiver) or the cable within 1 meter from the port. As shown in the picture below, the 5th core of the cable port on the side of the cable tracer (receiver) is disconnected, and the 5th indicator in the 1-8 indicators is off, indicating that the 5th core of the port is disconnected and the other cores are connected.

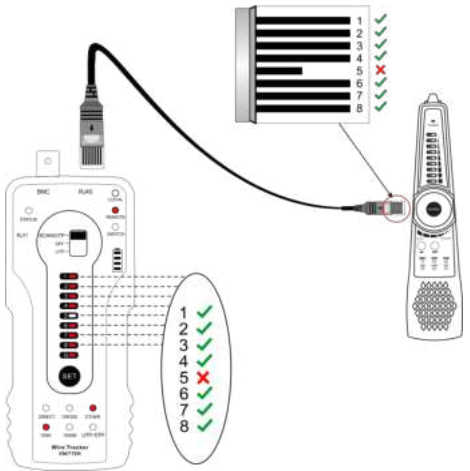

The mid-end of cable continuity detection: If the cable sequence detects that the cores of the cable are disconnected, and the local / remote cores are detected to be connected, indicating that the break point of the cable is in the middle position away from the ports on both sides.

5.2.3 Short circuit test

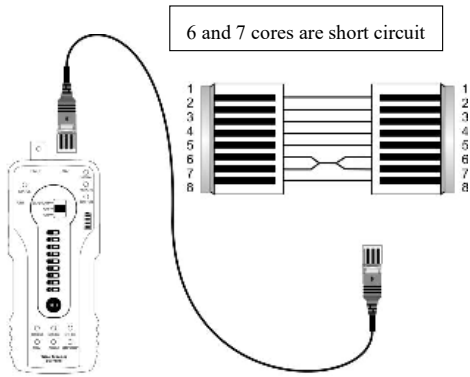

1) Not connect receiver end

Emitter mode: The indicator lights of the short circuit pairs are flashing

Switch mode: The indicator lights of the short-circuit pairs are on.

2) Connect receiver end


Sequence mode: The indicator lights of the short-circuit pair are on at the same time.

Emitter and Remote mode: The indicator lights of the short circuit pairs are flashing.

Note: Under the port mode of receiver, the indicator lights of the short circuit pairs are flashing.

5.2.4 Continuity detection in the state of connected switches

Under UTP mode, press “SET” key to switch to the "SWITCH" function. When connected to a switch, 1-8, G indicator indicates the continuity of the cable, lights on means connected, lights off means disconnected (The 100M switch is 1236 line connected, the 1000M switch is 1-8 lines connected). In this mode, connect one end of cable to the RJ45 port of emitter, and the other end of cable disconnect to the switch, also can detect the short circuit status of network cable, the indicator light will be on if short circuit.

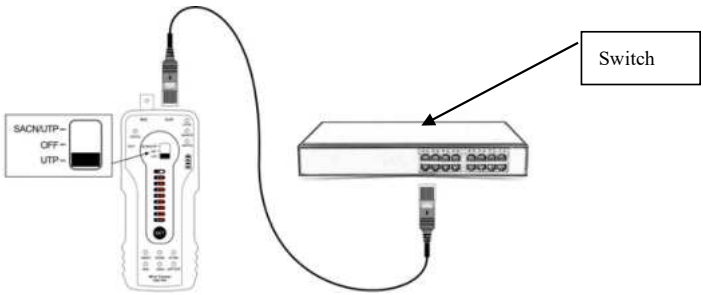

PD powered detected

switch or PSE power supply device connected to the “PD” port of the cable tracer, if the indicator light is on,

eans PoE voltage output working normal. There are 4 indicator lights of the “PD” port, when testing


pins used of PoE switch for power supply, if 1236 indicator light is ON, it means PoE switch supply power

ugh Pin 1236. If 4578 indicator light is ON, it means PoE switch supply power through pins 4578. If 1236 and

8 indicator lights are ON, it means device power supply through pins 1236 and 4578.

lication: Checking the pins used of PoE switch or other device for power supply, to avoid cause cannot supply

er or camera and other device damaged.

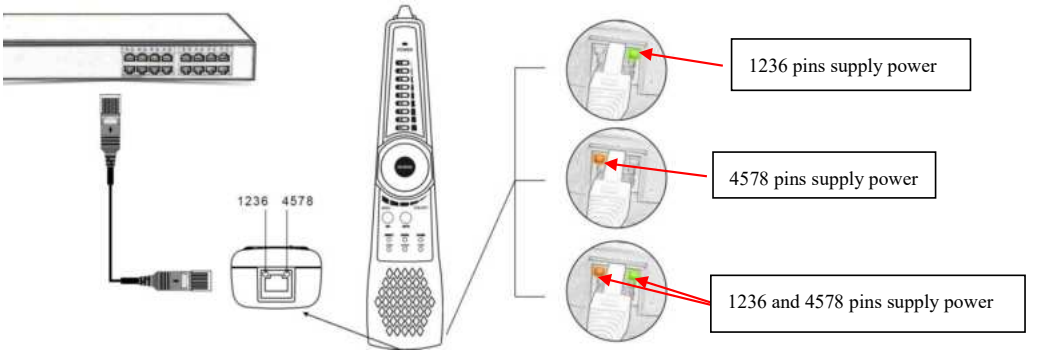

Other features

e DC level and positive / negative polarity testing

ı off the emitter, the red and black wire clip of BNC cable connect to the telephone line or battery, the other

connect to BNC port. (Note: If the telephone cable with welled RJ45 connectors, directly connect telephone

e to RJ11 port)

e indicator light is in green, that means the red wire clip is positive, and the black clip is negative, if the

cator light is in red, that means the black wire clip is positive, and the red wire clip is negative. The level is

ıer, the indicator light is brighter, the level is lower, the indicator light is darker.

6. Specifications

Item	Wire Tracker
Emit signal	Digital signal(rejects noise and false signals)
Cable type	RJ45 Twisted pair, RJ11 telephone line, BNC cable etc.
UTP cable test	The digital “1-8” for cable sequence shielded cable and shielding layer continuity indicator, check cable type indicator: straight/cross/other, 100M/1000M network cable test, and near-end, mid-end, far-end continuity testing, UTP cable short circuit test
Continuity test of RJ45 cable connectors	Detect the continuity of the pins on both sides of network cable and short circuits
PD (powered) test	PoE switch power supplying status test and check the pins used for power supply
LED lamp	Short press On /Off LED light
Silent mode	Long press key “Mute” to switch silent mode, find cable through indicator
Audio output	Support external audio output
Power supply	
External power supply	Two AA batteries
General	
Working Temperature	-10℃---+50℃
Working Humidity	30%-90%
Dimension	
Emitter Dimension	152mm x 62mm x 27mm /0.12KG
Receiver Dimension	218mm x 48mm x 32mm /0.1KG

The data above is only for reference and any change of them will not be informed in advance. For more detailed technical inquiries, please feel free to contact us.