Since 1968

COMMAX
SmartHome & Security

User Manual

APARTMENT HOUSE INTERCOM (ROOMSTATION) DP-SS




www.commax.com

COMMAX Co.,Ltd

- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.

1. Overview

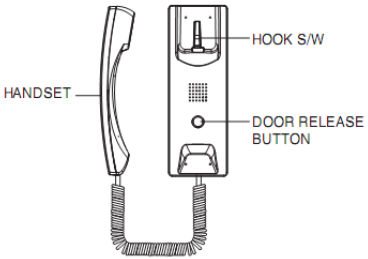


2. Operation

1. Hear a call sound from receiver ① When visitor press the call button on the doorstation
2. Converse with visitor after raise up handset
3. After ascertain the visitor, press the door release button ③ to open door


NOTE : No need to connect extra power by reason of it's supplied power source from doorstation

3. Installation

1) Please attach a bracket on the wal correctly with screw.
2) After the attachment of bracket, please Adjust the groove of the product with a bracket and then pull it down.

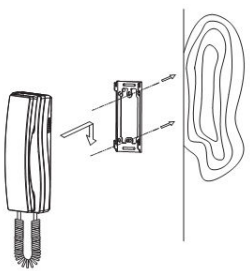

4. Wiring

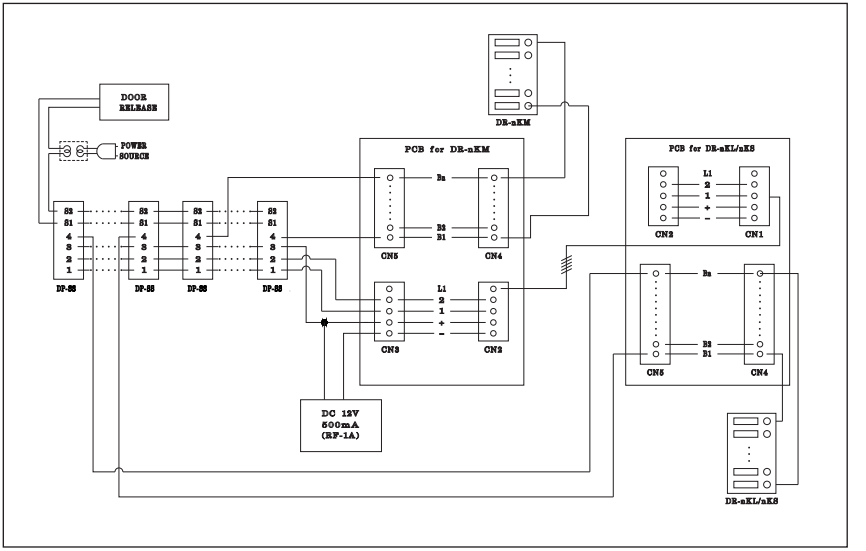
DOOR
RELEASE
POWER
SOURCE
DP-S6
DP-S6
DP-S6
DP-S6
DR-nKM
PCB for DR-nKM
Rn
B2
B1
CN5
CN4
L1
2
1
+
-
CN3
CN2
PCB for DR-nKL/nKS
L1
2
1
+
-
CN2
CN1
Rn
B2
B1
CN5
CN4
DC 12V
500mA
(RF-1A)
DR-nKL/nKS



COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea
Int'l Business Dept. : Tel.; +82-31-7393-540~550 Fax.; +82-31-745-2133
Web site : www.commax.com

Printed In Korea / 2016.04.105